



For details, refer to the Operating Instructions.
詳細資訊，請參閱使用說明書。

Quick Setup Guide/快速設定指南

DAV-TZ215/DAV-TZ715

1 Connecting the speakers/連接揚聲器


For DAV-TZ715, speaker assembly is necessary. Refer to the supplied "Speaker Installation Guide."

若要使用DAV-TZ715，必須安裝揚聲器。請參閱提供的“揚聲器安裝指南”。

To connect speaker cords to the speaker/將揚聲器導線連接到揚聲器


Connect the cord so that the cord's color tube matches the color of the label on the rear of the speaker.

連接導線時，使導線的色環對應揚聲器背面標籤的顏色。

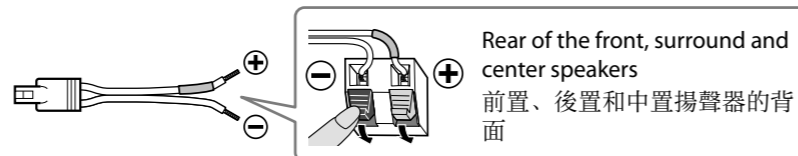

Connect the speaker cords to match the color of the SPEAKERS jacks of the unit.

將揚聲器導線連接到本機上對應顏色的SPEAKERS插孔。

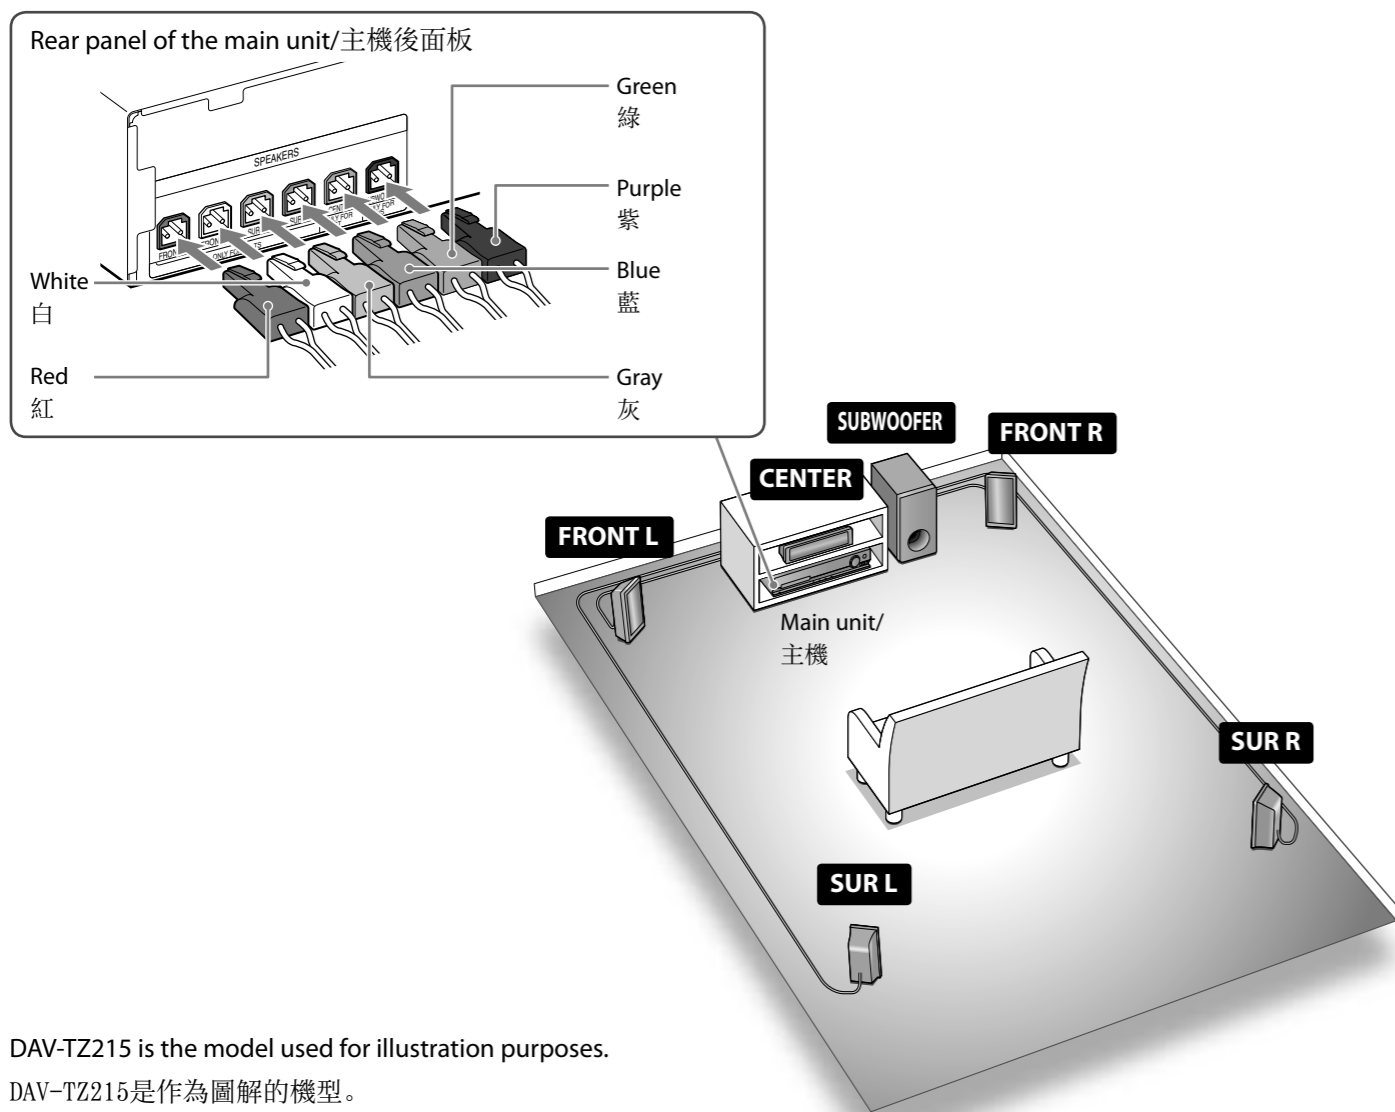

DAV-TZ215 is the model used for illustration purposes.



DAV-TZ215是作為圖解的機型。

2 Connecting your TV/set-top box/連接電視機/機上盒

Depending on the jacks on your TV or set-top box, select the video and audio connection method.

視電視機或機上盒上的插孔而定，選擇視頻和聲音連接方法。

Connecting the video to your TV/將視頻連接至電視機

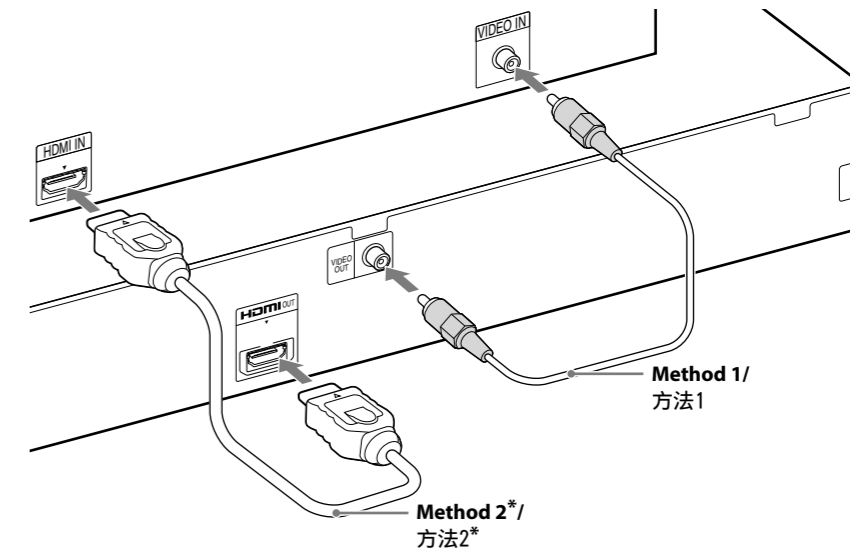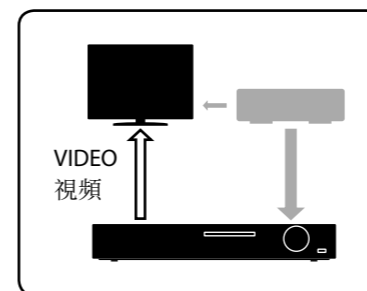



* The High Speed HDMI cable is supplied with certain models/in certain areas only.

* 僅某些機型/某些地區提供高速HDMI電纜。

Connecting the audio from your set-top box/連接來自機上盒的聲音

If you do not use a set-top box, refer to "Connecting your TV/set-top box" in the Operating Instructions.

如果不使用機上盒，請參閱使用說明書中的“連接電視機/機上盒”。

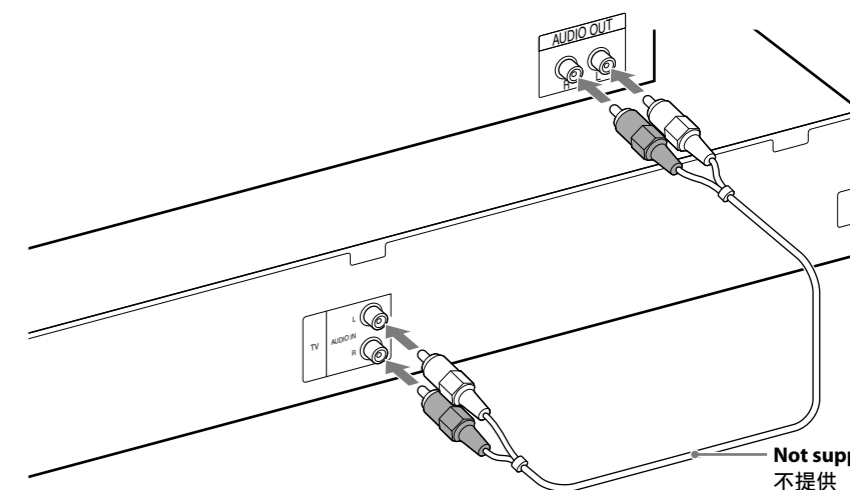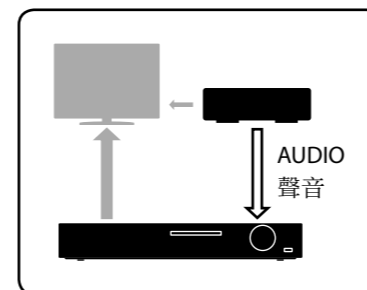

3 Performing the Quick Setup/執行快速設定


Note
Do not insert a disc before performing the Quick Setup.

注意
執行快速設定前，切勿插入光碟。

1 Connect the AC power cord.


The shape of the wall outlet differs depending on the area.

連接交流電源線。
電源插座的形狀視地區而異。

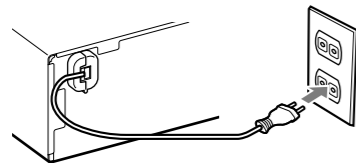

2 Turn on the power of the main unit and TV.

打開主機和電視機的電源。

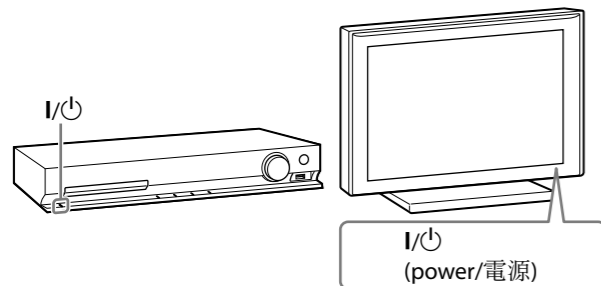



3 Switch the input selector on your TV to display "SONY Home Theatre System."

切換電視機上的輸入選擇器以顯示“SONY Home Theatre System”。


4 Set each following item, using ←/↑/↓/→ and +.

Displayed items vary depending on the area.


使用←/↑/↓/→和+設定下列各個項目。
視地區而定，顯示項目會有不同。

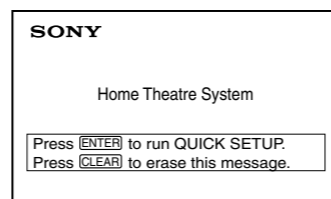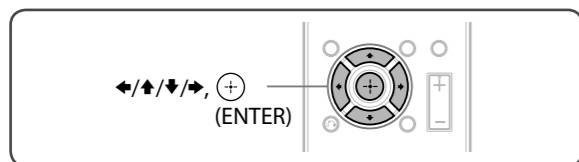

Select an on-screen language.
選擇畫面顯示語言。

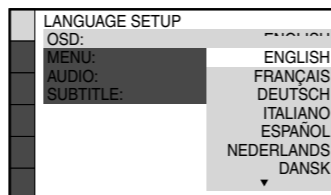


Select the aspect ratio of the connected TV.
選擇所連接電視機的縱橫比。


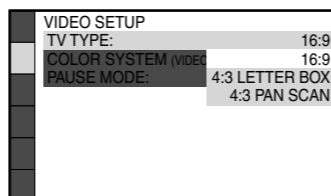


Select [ON] when you connect the main unit and the TV with an HDMI cable.

使用HDMI電纜連接主機與電視機時，選擇[開]。

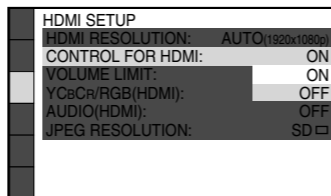


Select the speaker formation.
選擇揚聲器架構。

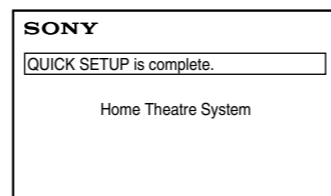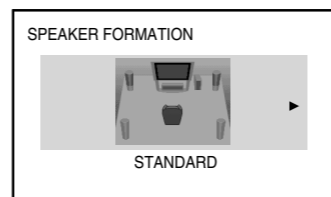

Listening to TV sound from all speakers/從所有揚聲器聆聽電視機的聲音


1 Press TV.

按TV鍵。

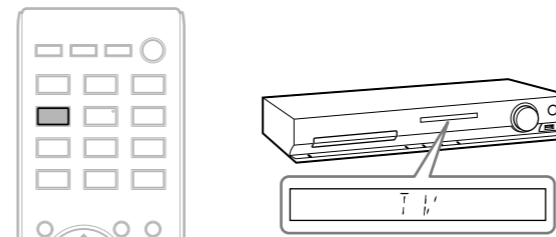


2 Press SYSTEM MENU.

按SYSTEM MENU鍵。

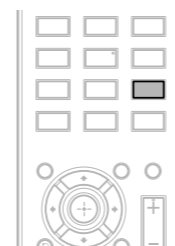


3 Press ↑/↓ to display "SUR.SETTING," then press +.

按↑/↓鍵顯示“SUR.SETTING”，然後按+鍵。

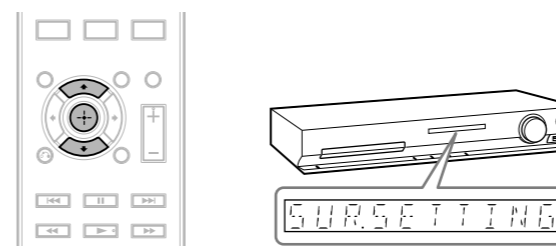

4 Press ↑/↓ to display "PRO LOGIC," then press +.

按↑/↓鍵顯示“PRO LOGIC”，然後按+鍵。

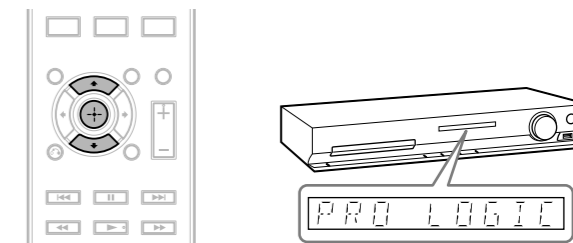

5 Press SYSTEM MENU to exit the menu.

按SYSTEM MENU鍵退出選單。

